




Service Manual KE-640


Potentiometer replacement

Before beginning this task, switch off the machine and pull out the mains plug from the mains socket!

Step 1 / 2 / 3

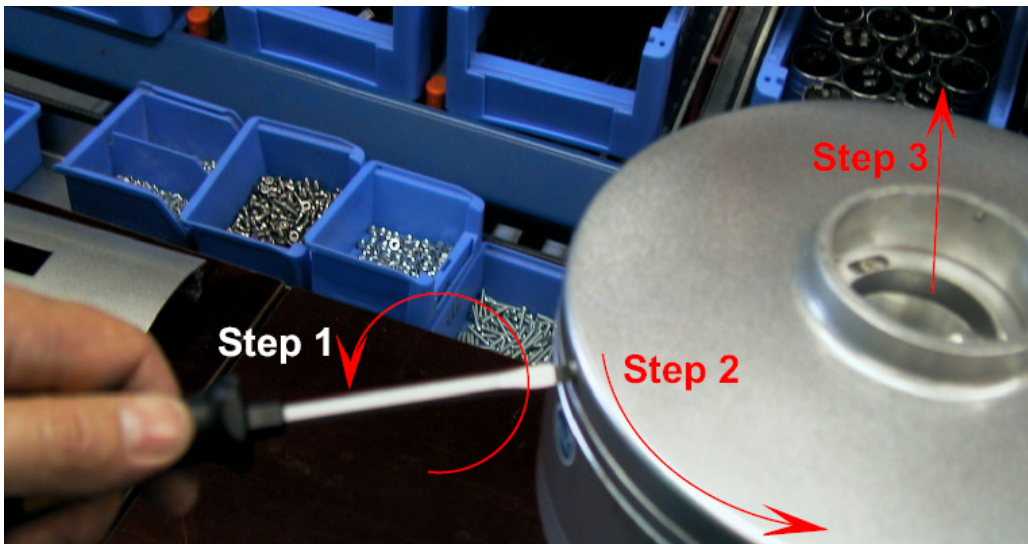

Step 4

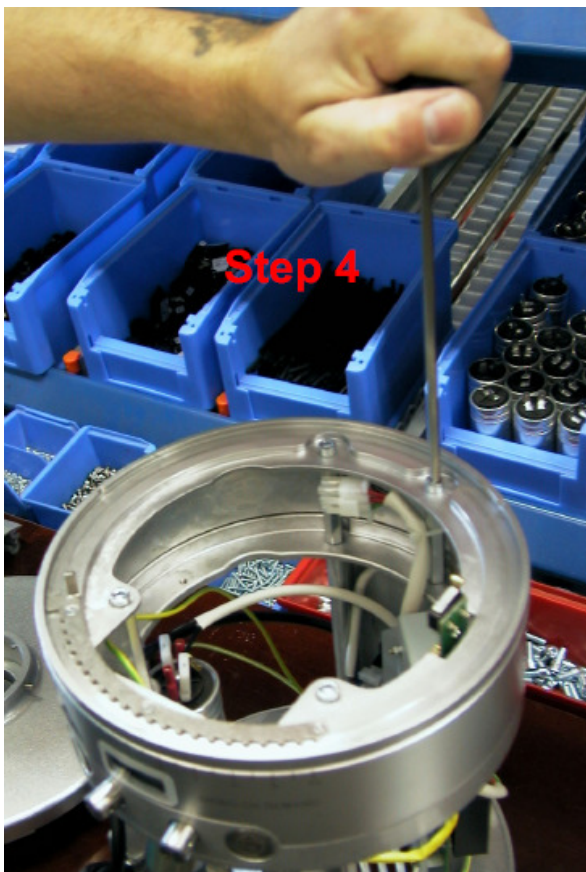




Step 5

Remove the 4 screws see step 4


Step 6

Disconnect all connectors on the circuit board
(see picture on the right)

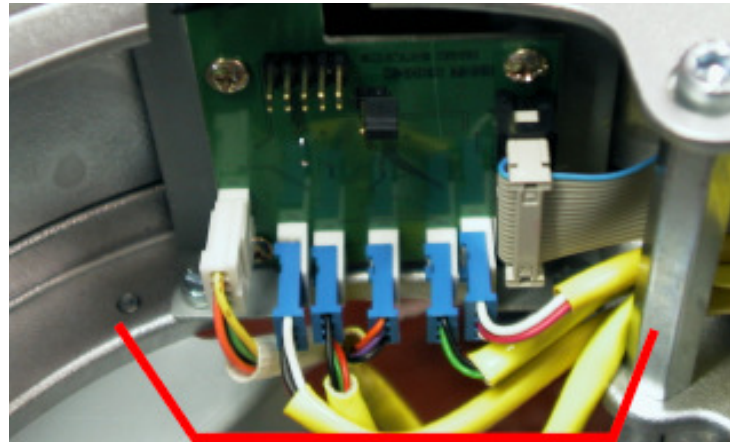

Step 7

Remove the middle ring with the deco ring
(see picture on the right)

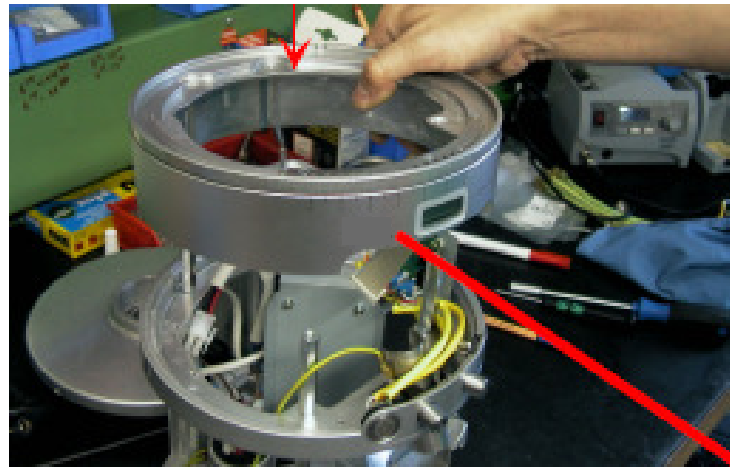


Step 8

Unscrew and remove the spout

Step 9


Unscrew and remove the timer/adjusting knob(s)

Step 10

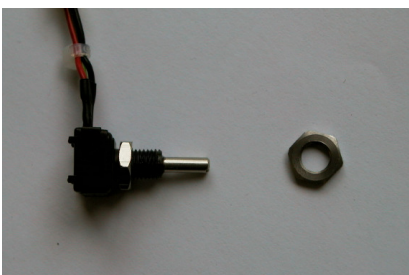




Step 11

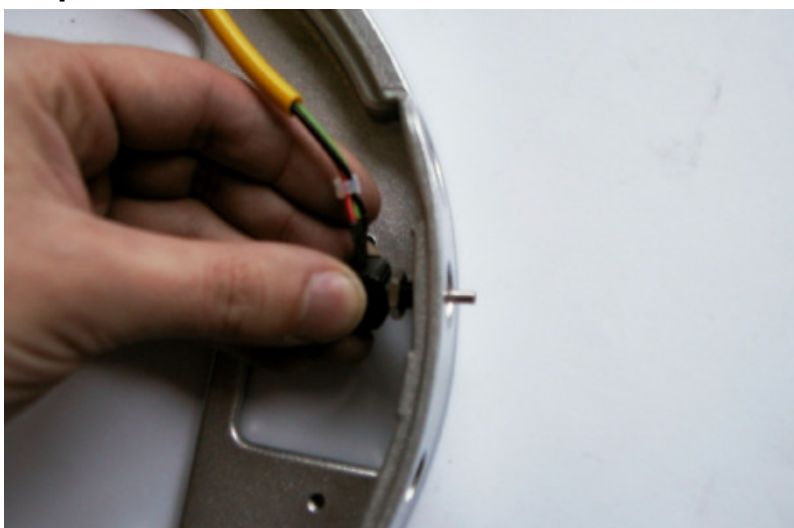

Step 12



Step 13

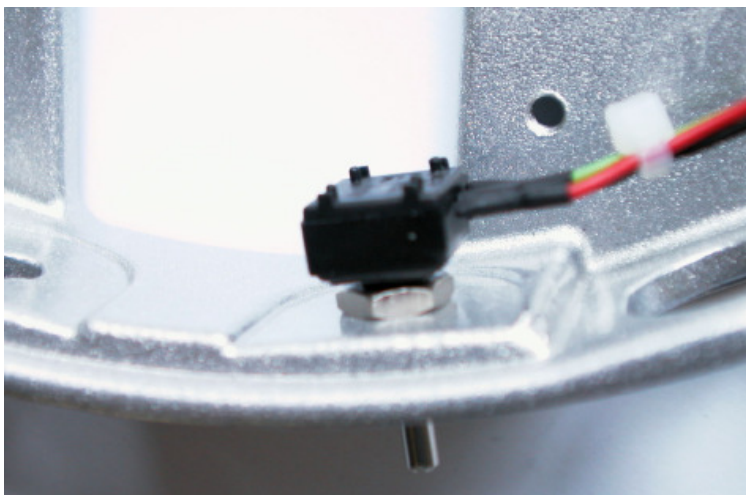



Step 14



Step 15

Reassemble all the parts in reverse sequence

12.01.06 // bg