 




U.S. Distribution Center  
8801-B Smiths Creek Rd, Wales, MI 48027  
Tel 810-367-7125 Toll-Free 800-835-5992  
Fax 810-367-7130

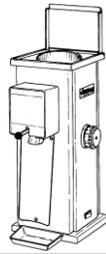

**ditting**<sup>®</sup>  
— SWISS —  
*Serving the Whole-Bean  
Coffee Market Since 1968*  
[www.ditting.com](http://www.ditting.com)

**Ref. Models:**  
KFA903  
KFA1203  
KFR1203

## SERVICE TIP #R12

### SWITCH RETROFIT

The round power switch used on older KFA903, KFA1203 and KFR1203 grinders is no longer being produced. The new switch is square.

1. **UNPLUG THE GRINDER.**
2. Remove the 4 corner screws of the cover and remove it with the plastic hopper.
3. Remove the switch handle and screw.
4. From the hopper area, looking in and towards the front of the grinder, remove the 4 outermost hex head screws.
5. Lift and remove the switch housing (cover) and carefully unplug the two wires to the pilot light by pulling them away.
6. **DO NOT REMOVE ANY WIRES FROM THE SWITCH YET.**
7. Remove the two screws holding the switch mounting plate. (See "S" on the drawing)
8. Remove the bag-clamping lever from the underside of the switch. (**Remember the position**)
9. Remove the two screws holding the old switch in place.
10. Push the switch and wires aside.
11. **Mount the new switch on the base plate using the following positioning guide.**
12. Fasten the switch with screws and lock washers from under the base plate.
13. Replace the bag-clamping lever on the underside of the switch. Position it the same way it came out.
14. Move the wire(s) from L1 of the old switch to position 1 of the new switch.
15. Move the wire(s) from L2 to position 3.
16. Move the wire(s) from terminal U of the old switch to position 2 of the new switch.
17. Move the wire(s) from terminal V of the old switch to position 4 of the new switch.
18. Check all the wires and make sure the wires are screwed on tightly.
19. Wedge the back of the base plate on first and fasten the two mounting screws.
20. Place the switch handle on and turn the switch towards on. Confirm the bag clamp is working.
21. Pick up the switch cover housing. Attach the two wires to the pilot light (one wire to either side of the pilot light). Gently guide the housing over the switch shaft. Hold it in place and install the 4 hex head screws. **Make sure no wires are pinched between the switch housing and the grinder.**
22. Replace the hopper.
23. Plug the grinder into the outlet and switch on momentarily. If the circuit breaker kicks off, the wiring is incorrect. Unplug the grinder. Call Ditting USA for assistance. 800-835-5992.

Visit our website at [www.ditting.com](http://www.ditting.com) for this and other service tips.